


# Installation Instructions

## Honeycomb Shades

**Corded / Corded TDBU / Corded Day & Night**

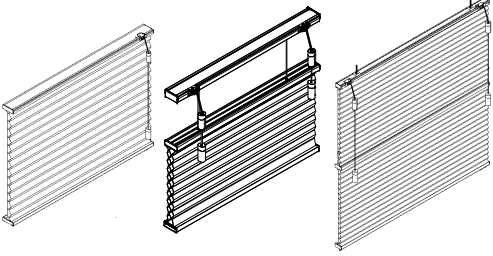

### Getting Started





Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

#### Tools Needed :

- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil



You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	1 1/4" Screws (Provide) 
	3/4" Screws (Provide) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide) 
Metal	Sheet Metal Screws (Not Provide) 

### Check Component/Hardware:




Cord Cleat



Hold Down bracket (optional)



Installation Bracket (for 3/8" D & 3/4" S)




Installation Bracket (for 3/8" S)

### Hardware Standard Quantity

Order Width (X)	8 1/2" ≤ X ≤ 42"	42" < X ≤ 75"	X > 75"
Installation Bracket	2	3	4
Hold Down Bracket (Optional)	2	2	2
Cord Cleat	1pc for Corded, 2pcs for Corded TDBU & Day & Night		
Spacer (Optional)	2	3	4
2" Screw for Installation Bracket with spacer	4	6	8
1 1/4" Screw for Installation Bracket	4	6	8
3/4" Screw for Hold Down Bracket/ Cord Cleat	Hold Down Bracket qty*2 + Cord Cleat qty		


### Step 1: Bracket Installation

Measure 3" from both ends of the head rail. Mark the bracket location on the mounting surface. Proper alignment of brackets will make installation easier.

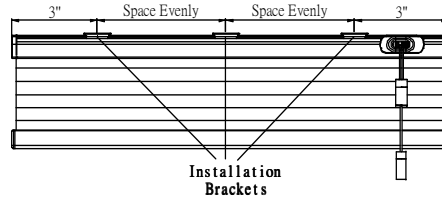


#### a. for 3/8" Double cell & 3/4" Single cell Inside Mount:

Allocate a min. distance of 3/16" from wall to the front of brackets. Use two 1 1/4" mounting screws to secure brackets. Use wall anchors for drywall or plaster wall. (Align the front of brackets flush with wall if only lock the back hole in the brackets.)

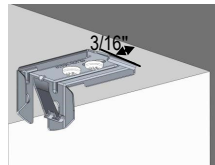


#### Outside Mount:

Allocate a min. distance of 5/16" from the end of brackets to the top window frame. Use two 1 1/4" mounting screws to secure brackets. Use wall anchors for drywall or plaster wall.

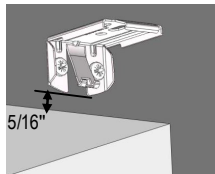


#### b. for 3/8" Single cell Inside Mount:

Allocate a min. distance of 2/8" from the edge of the wall to the front of brackets. Use two 1 1/4" mounting screws to secure brackets.

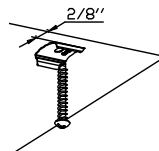


### Outside Mount:

Allocate a minimum distance of 3/8" from the end of brackets to the top window frame. Use two 1 1/4" mounting screws to attach each bracket.

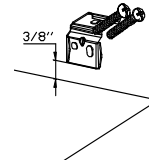


### Step 2: Shade Installation

- Position the shade so that the front is facing you.
  - Insert the rail with an angle facing the window; hooking up with the bracket front side, and then push it upward to snap into the bracket.
- For proper installation, start with attaching the front rail to the bracket.

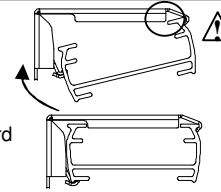

### Step 3: How to Install Hold Down Brackets (optional)


Use two 3/4" screws to secure each hold down bracket.

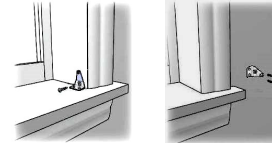

### Step 4: Shade Operation


For Corded TDBU & Day & Night: when lowering the shade, lower the bottom rail first and then middle rail. When raising the shade, raise the middle rail first and then bottom rail.

For Corded: operate as below illustration, according to the location of cord lock.

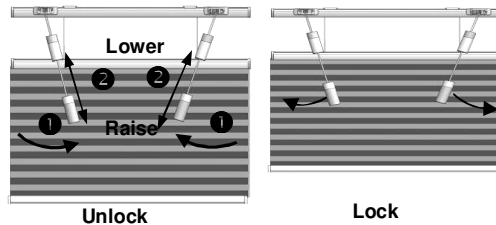


### Remove the Shade

- For Corded, Fully raise the shade
- For Corded TDBU & Day & Night, Lower the mid rail
- Insert screwdriver into the gap between the back of the rail and the bracket. Gently maneuver the screwdriver toward yourself to pry the bracket.

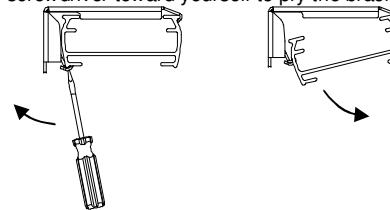

### How to Reassemble Ellipse Safety Cord Connector

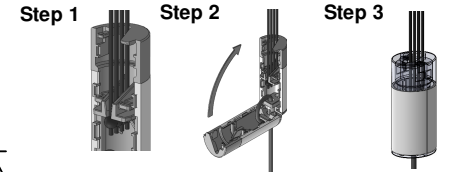


- Step 1: Place all the cords into the slot of Ellipse Safety Cord Connector;
- Step 2: Close the Ellipse Safety Cord Connector;
- Step 3: Pull the tassels cords and make sure it is closed tightly.

### Safety Warning

Warning! Children can become entangled and strangle in window shade cords. Keep all cords out of reach from children. Move cribs and other furniture away from window coverings with cords. The following devices are recommended:

- Cord cleat (included)
- Clip/Clamp
- Tie the cord to itself
- Use any tie-down device



### Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).

N300473